

Wi-Fi

No communication


Question:

Even though my PC is correctly connected to one AiM device via WiFi, the User Interface of Race Studio 3 does not report it. Any idea about this issue?

Answer:

When two devices are correctly connected via WiFi and they can't communicate one another is probably because your PC WiFi port address is in static mode. You need to convert it to dynamic.

• Open "Network and Sharing Center" in the windows research engine.

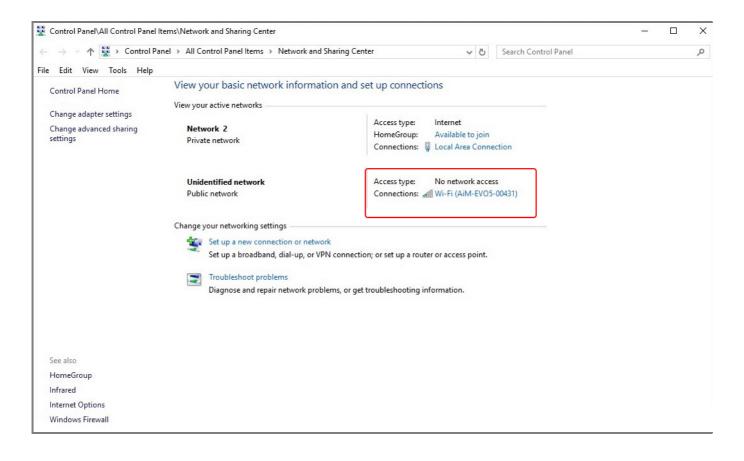



- Click on the Wi-Fi connection and the panel below on the left shows up: click "Properties"
- Double click on "Internet Protocol Version 4 (TCP/IPv4)" as in the image below on the right

ഫ്പി Wi-Fi Status	×	🌐 Wi-Fi Properties	×
General		Networking Sharing	
Connection		Connect using:	
IPv4 Connectivity:	No network access	TP-LINK Wireless USB Adapter	
IPv6 Connectivity:	No network access		
Media State:	Enabled		Configure
SSID:	AiM-EVO5-00431	This connection uses the following items:	
Duration:	00:07:11	Client for Microsoft Networks	^
Speed:	24.0 Mbps	🗹 🐙 File and Printer Sharing for Microsoft Net	tworks
Signal Quality:	Properties	Cost Packet Scheduler Internet Protocol Version 4 (TCP/IPv4) Internet Protocol Version 4 (TCP/IPv4) Internet Microsoft Network Adapter Multiplexor P	Totocol
Activity		Microsoft LLDP Protocol Driver Internet Protocol Version 6 (TCP/IPv6) <	>
Sent	Received	Install Uninstall	Properties
Packets: 333	3 0	Description	
Properties Disable	Diagnose	Transmission Control Protocol/Internet Protoco wide area network protocol that provides com across diverse interconnected networks.	
	Close	ОК	Cancel

• Verify that option "Obtain an IP address automatically" is selected.

Internet Protocol Version 4 (TCP/IPv4) Properties	×	
General Alternate Configuration		
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	3	
Obtain an IP address automatically		
Use the following IP address:		
IP address:		
Subnet mask:		
Default gateway:		
Obtain DNS server address automatically		
O Use the following DNS server addresses:		
Preferred DNS server:		
Alternate DNS server:		
Validate settings upon exit Advanced		
OK Canc	el	